IP Network A/V Camera, "Cywatch HD(High Definition) Megapixel IP camera"

Operating Instructions

CamTron Industrial Inc.

Cywatch HD Megapixel IP camera Operating Instructions (Ver 1.0_CT0901130)

First of all, we would like to express our appreciation on your choosing our Cywatch HD Megapixel IP Camera.

Cywatch HD Megapixel IP camera is a state of the art network A/V camera designed for demanding professional surveillance applications with the latest and most advanced H.264 codec. And Cywatch HD Megapixel IP camera is specially optimized for video surveillance, two-way video communications and wireless video network, where very high channel densities, high performance, low latency and power efficiency are critical requirements.

Cywatch HD Megapixel IP camera features the sensor Input, relay output, RS485 port. These functions may be utilized to control various system integration solution as well as remote surveillance. Cywatch HD Megapixel IP camera supports both Static IP and Dynamic IP for diverse IP connection as well.

In summary, Cywatch HD Megapixel IP camera provides multiple access/control options to the user.

The examples of access/controls are as follows:

- To record Event in FTP server installed in remote place.
- To search / delete / down-load / replay the recorded video.
- To support PoE (optional) for easy and convenient installation.

For more information or inquiry, please contact us to the followings;

Home Page : www.camtron.co.kr
e-mail : camtron@camtron.co.kr
Telephone : 82-2-402-5083
Fax : 82-2-402-5391
Address : 5th floor, Keum-ah B/D, 31-3, Karak-dong, Songpa-gu, Seoul, 138-801, Korea

Notice : IP camera's appearance, function and specification may be changed without prior notification.

IMPORTANT NOTES for Safety Precaution

. Please be sure to read the following with carefulness, before installing the product,

◈ Make sure to turn off the power before installing Cywatch HD Megapixel IP camera.

◈ Do not install under the direct sunlight or in dusty areas.

◈ Make sure to use the product within the temperature and humidity specified in the specification.

◈ Do not operate the product in presence of vibrations or strong magnetic fields.

◈ Do not put electrically conducting materials in the ventilation hole.

◈ Do not open the top cover of the product. It may cause a failure or electric shock on the components.

◈ To prevent from overheating, make sure to keep the distance at least 10cm from the ventilation hole.

◈ Check for proper voltage before connecting the power.

Table of Content

1 Introduction 4
1.1 About Operating Instructions manual 4
1.2 Feature 4
1.3 System Connections 5
2 System Operation 8
2.1 Remote Video Monitoring 8
2.2 Initialization of IP Address 9
3 Remote Configuration 10
3.1 Using Internet Explorer 10
3.2 IP camera Configuration 11
3.2.1 System Configuration 11
3.2.2 Video Configuration 13
3.2.3 Audio Configuration 16
3.2.4 Network Configuration 17
3.2.5 Serial Port Configuration 20
3.2.6 Event Configuration 22
3.2.7 Preset Configuration 25
3.2.8 User Configuration 26
3.2.9 Camera Configuration 28

1 Introduction

1.1 About Operating Instructions manual

The Operation Instructions manual is to provide information on operation of the high quality HD Megapixel IP Network Camera. In this guide, information on installation, operation, configuration of IP Network Camera is written as well as how to trouble shoot in case problems arise.

1.2 Feature

Cywatch HD Megapixel IP Camera is a network camera and a video and audio surveillance transmission system based on IP network through LAN, ADSL/VDSL, and Wireless LAN.

■ Video

- High-quality compression algorithm, H.264
- Compression in various resolution: CIF (352x240) ~ Full HD (1920x1080)
- Wide range of video transmission rate: 32kbps ~ 8Mbps
- Various transmission mode: CBR, VBR
- Motion detection
- Supports HDMI output

■ Audio

- Multi-transmission mode: Uni-direction (Cywatch -> Client PC or Decoder, Client PC or Decoder -> Cywatch HD Megapixel IP camera), Bi-direction

■ Network

- Static IP and Dynamic IP(DHCP)
- One to one and one to many connection
- Multicasting
- Automatic transmit rate control according to network condition

■ Serial Data

- One serial ports (RS-485)
- Data pass-through mode: Serial data communication between Cywatch HD Megapixel IP camera – Decoder

■ Sensor and Alarm

- Connections to external sensor and alarm devices
- Event Alarm

■ **User Interface**

- System status display utilizing OSD(On Screen Display)
- System configuration using Internet Explorer

■ **Reliability**

- Reliable embedded system
- System recovery utilizing dual watch-dog functions

1.3 System Connections

Cywatch HD Megapixel IP cameras can be connected in either 1-to-1 fashion where one Cywatch HD Megapixel IP camera is connected one decoder or 1-to-many fashion where one Cywatch HD Megapixel IP camera connected to many PC and decoders. (Cywatch video server can work as a decoder system which takes the data from a video server or IP camera, decodes and outputs analog video.)

■ **Topology**

Generally, the Cywatch HD Megapixel IP camera and the PC & decoder are connected in 1-to-1 mode or 1-to-many connection is also supported.

◈ **1:1 Connection (Unidirection)**

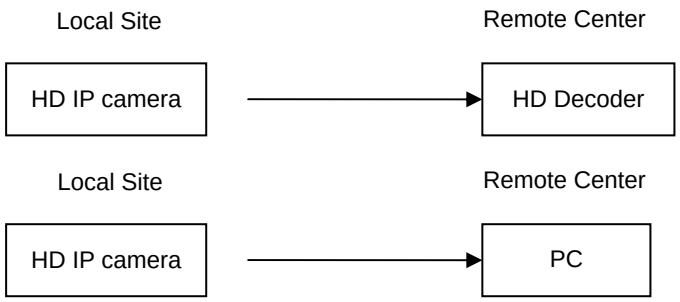

Mostly used configuration is 1 to 1 connection. A Cywatch HD Megapixel IP camera is installed at a site where video images can be transmitted and a PC or a decoder is installed at a center location to receive and view the video images on analog monitor. Audio and serial data are transferred in either direction.

◈ 1:N Connection (Unidirection)

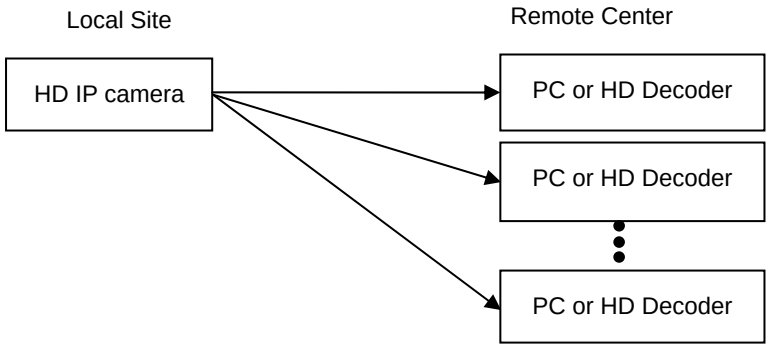

In this configuration, a site can be monitored from many remote center locations. Although up to 64 PCs or decoders can be connected to on Cywatch HD Megapixel IP camera, in the real network environment, network bandwidth can limit the maximum connections.
Functionally, the central monitoring system software can replace the decoder.

Multicast Mode
Within the network that supports multicasting, a large number of decoders can be used to receive video effectively from a Cywatch HD Megapixel IP camera using a single streaming of video and audio.

◈ Relaying

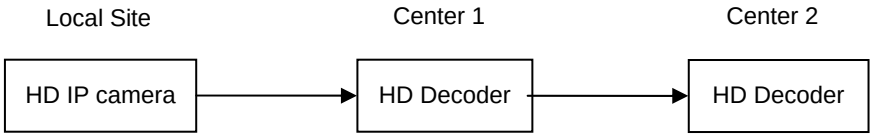

In this arrangement, video and audio can be retransmitted from a center to another center. The arrangement is useful when the network bandwidth to the site is limited while there are more than one center wanting to monitor the site.

◈ Central Monitoring System

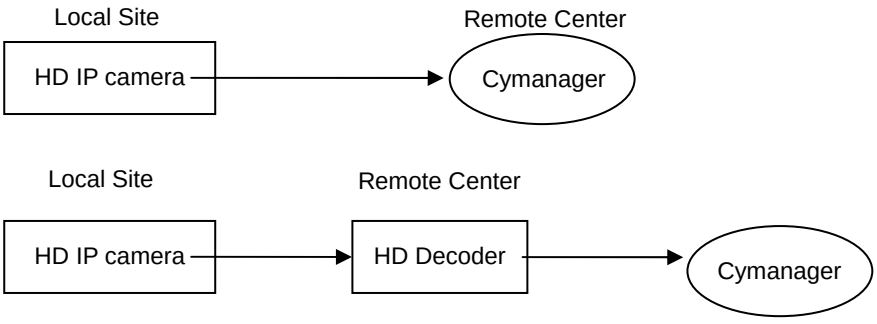

Cymanager is a Windows based remote monitoring program to access multiple Cywatch HD Megapixel IP camera for real-time monitoring or control of the encoders and connected cameras. Please refer to Cymanager User Manual for more information on Cymanager.

2 System Operation

2.1 Remote Video Monitoring

There are two ways to view the video once connections are made between local the site and center system. In order for a proper operation, an IP address must be set accordingly and please refer to '**Cyexplorer User's Guide'** or '**Remote Configuration in Chapter 3'** for a further details.

Default ID : admin Password : 1234

■ Video Monitoring with Decoder System

Once the IP address of Cywatch HD Megapixel IP camera is set in the remote IP address section of the decoder, the decoder system will connect to the Cywatch HD Megapixel IP camera and start receiving the video images. Normally, a monitor connected to the decoder will display video images.

■ Video Monitoring using Internet Explorer

If a system's IP address is entered on the Internet Explorer, the system will ask for confirmation to install Active-X Control. Once authorized, the Internet Explorer will start to display video images from IP camera as shown below.

http://192.168.10.100

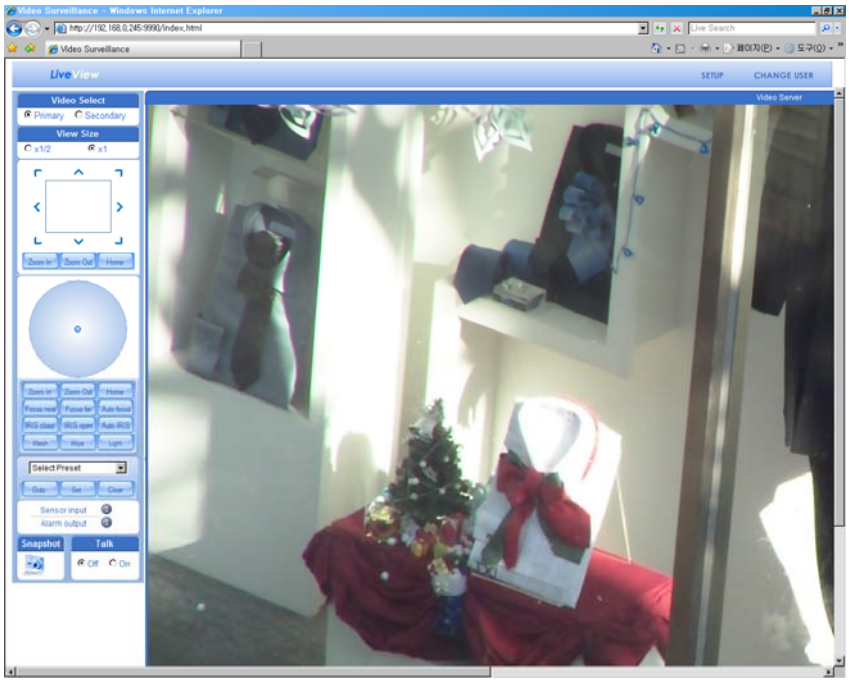

2.2 Initialization of IP Address

If a system's IP address is lost, the system can be reset to a known IP address using the reset button in the back side of the system:

① While system is in operation, press the reset button more than 5 seconds.

② The system will reboot automatically

③ Once the system has been rebooted, IP address will be set to the following.

- IP mode: Fixed IP
- IP address: 192.168.10.100
- Subnet mask: 255.255.255.0
- Gateway : 192.168.10.1
- Base port : 2222
- Http port : 80

3 Remote Configuration

3.1 Using Internet Explorer

The IP camera can be configured using web browser. Type IP address of IP camera in the address input area of Internet Explorer, then a live viewing screen will be displayed. Press **Setup** button located in the upper right area of the monitoring screen, then the se page for server setup will be displayed.

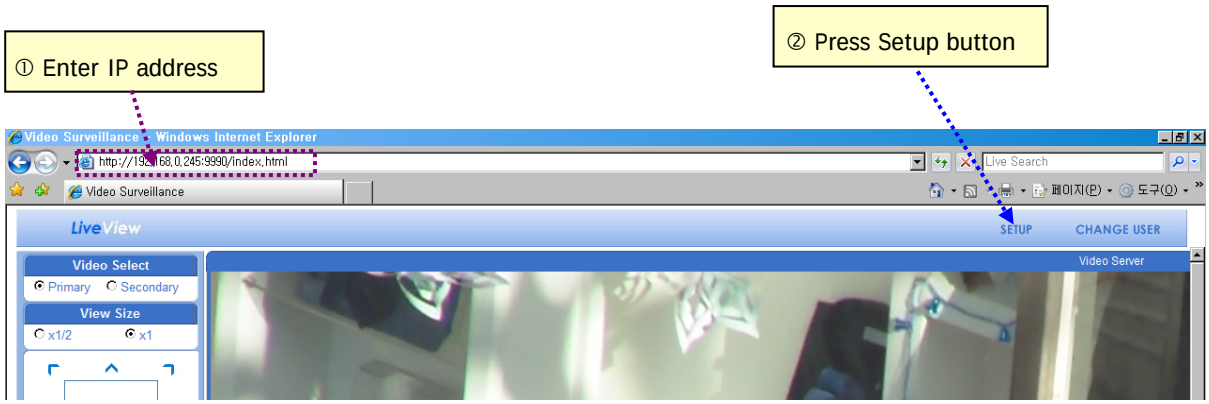

The configurations are grouped into 9 categories: **System**, **Video**, **Audio**, **Network**, **Serial**, **Event, Preset, User and Camera**. Any configuration changes are not applied until **Apply** is pressed. Leaving the page without pressing **Apply** button, changes in the page will be discarded.

3.2 IP camera Configuration

3.2.1 System Configuration

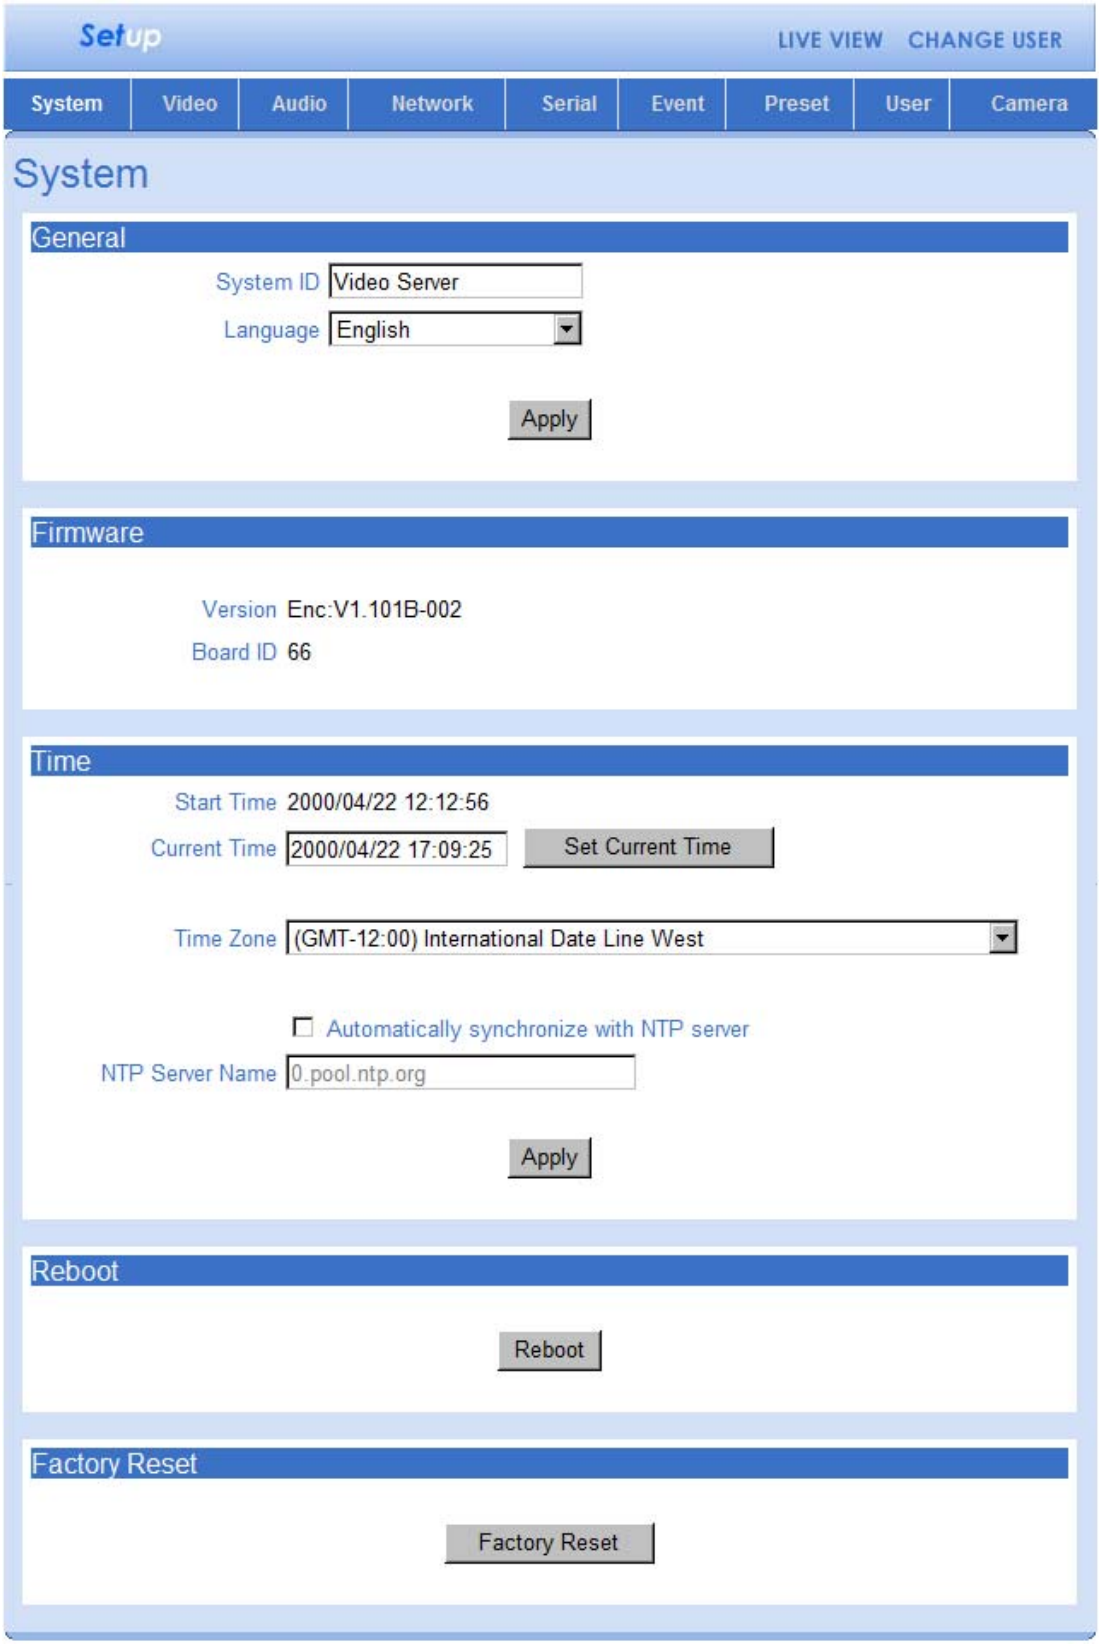

■ System ID

System ID: Alphanumeric System ID to be transferred to remote software

■ Language

English, Korean, Japanese, Russian, Spanish, Portuguese and Chinese are supported in web-based configuration. The language can be selected at System tab.

■ Firmware version

Current firmware version

■ Start Time

Latest system boot date and time

■ Current Time

Current date & time: Enter a new date and time and press **Set Current Time** button to update date & time.

■ Time Zone

Time zone: Select time zone of where the system is installed. Depending on the time zone, Daylight Saving Time will work automatically.

■ Automatically synchronize with NTP server

Synchronize system time with an NTP server using NTP(network time protocol). Name of the NTP server should be registered on NTP server Name.

■ Reboot Server

Pressing **Reboot Server** button will cause the system to reboot. Do not press the Reboot button unless the server needs a reboot.

■ Factory Reset

Set all settings to the factory default values. System log and user registrations are also cleared.

3.2.2 Video Configuration

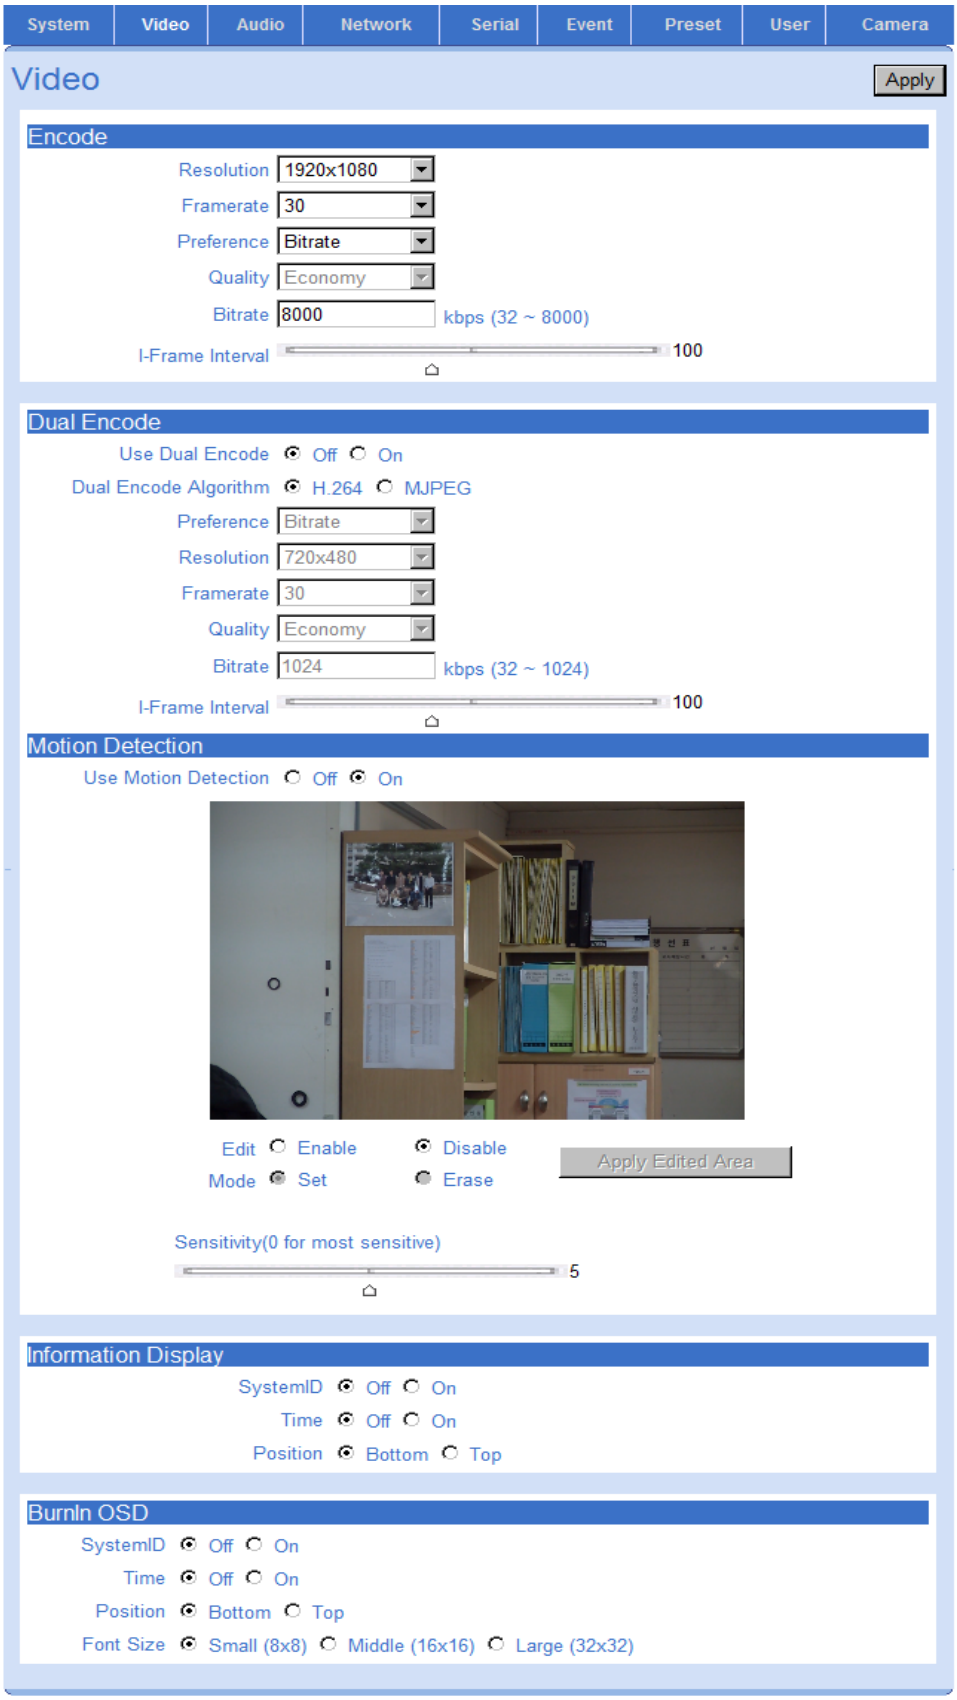

■ Preference

Preference in video compression and transmission: With 'Bitrate' selected, the video compression will be effected by the 'Bitrate' value entered. With 'Quality' selected, the video compression will be effected by the quality of image selected. Therefore, 'Bitrate' and 'Quality' corresponds to CBR and VBR respectively.

■ Resolution

Selectable video compression resolution:
1920 X 1080, 1280 x 720, 1680 x 1050, 1600 x 900, 1440 x 900,
1280 x 1024, 1280 x 960, 1024 x 768, 800 x 600, 640 x 480, 352 x 288, 352 x 576 720 x 288 720 x 576 352 x 240 352 x 480 720x 240 720 x 480

■ Frame rate

Selectable video frame rate: Determine the maximum number of frames of video images to compress. The frame rate of actually transmitted video can be affected by the network bandwidth limitation.

■ Quality

Video image compression quality: The selection is possible with Preference is set to 'Quality'.

■ Bitrate

Video bitrate: The value is applicable when Preference is set to 'Bitrate'.

■ I-Frame Interval

I-frame interval: Possible values between 0 and 255. There will be no I-frames if 0 is selected.

■ Use motion detection

Use to enable or disable motion detection.

■ Motion Detection Area Editing

Configure regions for motion detection. Regions of arbitrary shape can be configured by the following steps.

① Enable **Edit** item.
② Select editing Mode. **Set** is for including cells to motion detection region and **Erase** is for excluding.
③ Select cells using the right button of the mouse. Multiple cells can be selected conveniently by press and dragging.
④ Press **Apply Edited Area** to save the editing.

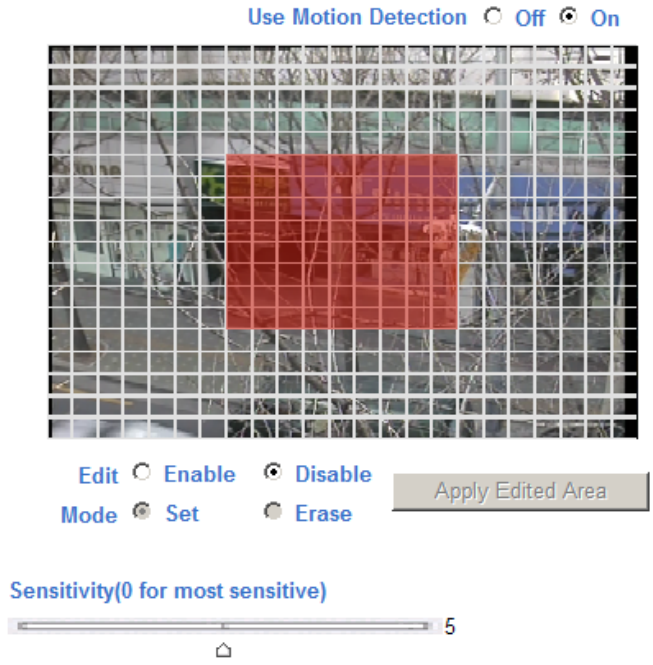

■ Sensitivity

A condition to trigger an event with motion detection. The value determines the sensitivity of the motion detection within a block: the smaller, the more sensitive.

■ Information Display

System ID and/or server time can be display over the video window in Internet Explorer. Each item can be turn on or off separately, and position also can be configure. These information are displayed after the video is decompressed.

■ Burn-in OSD

Inserts system ID and date/time in the compressed video. Separately **System ID** and **Time** can be turned On or Off in the video. **Position** specifies the position of such data.

■ Brightness

Controls input video brightness by selecting values between 0 and 100.

■ Contrast

Controls input video contrast by selecting values between 0 and 100.

■ Hue

Controls input video Hue by selecting values between 0 and 100.

■ Saturation

Controls input video saturation by selecting values between 0 and 100.

3.2.3 Audio Configuration

■ Mode

Select audio operation mode.

Mode	Action
Off	No operation
Tx-Only	Transmit only
Rx-Only	Receive only
Tx & Rx	Transmit and Receive

■ Input Gain

Set audio input gain.

3.2.4 Network Configuration

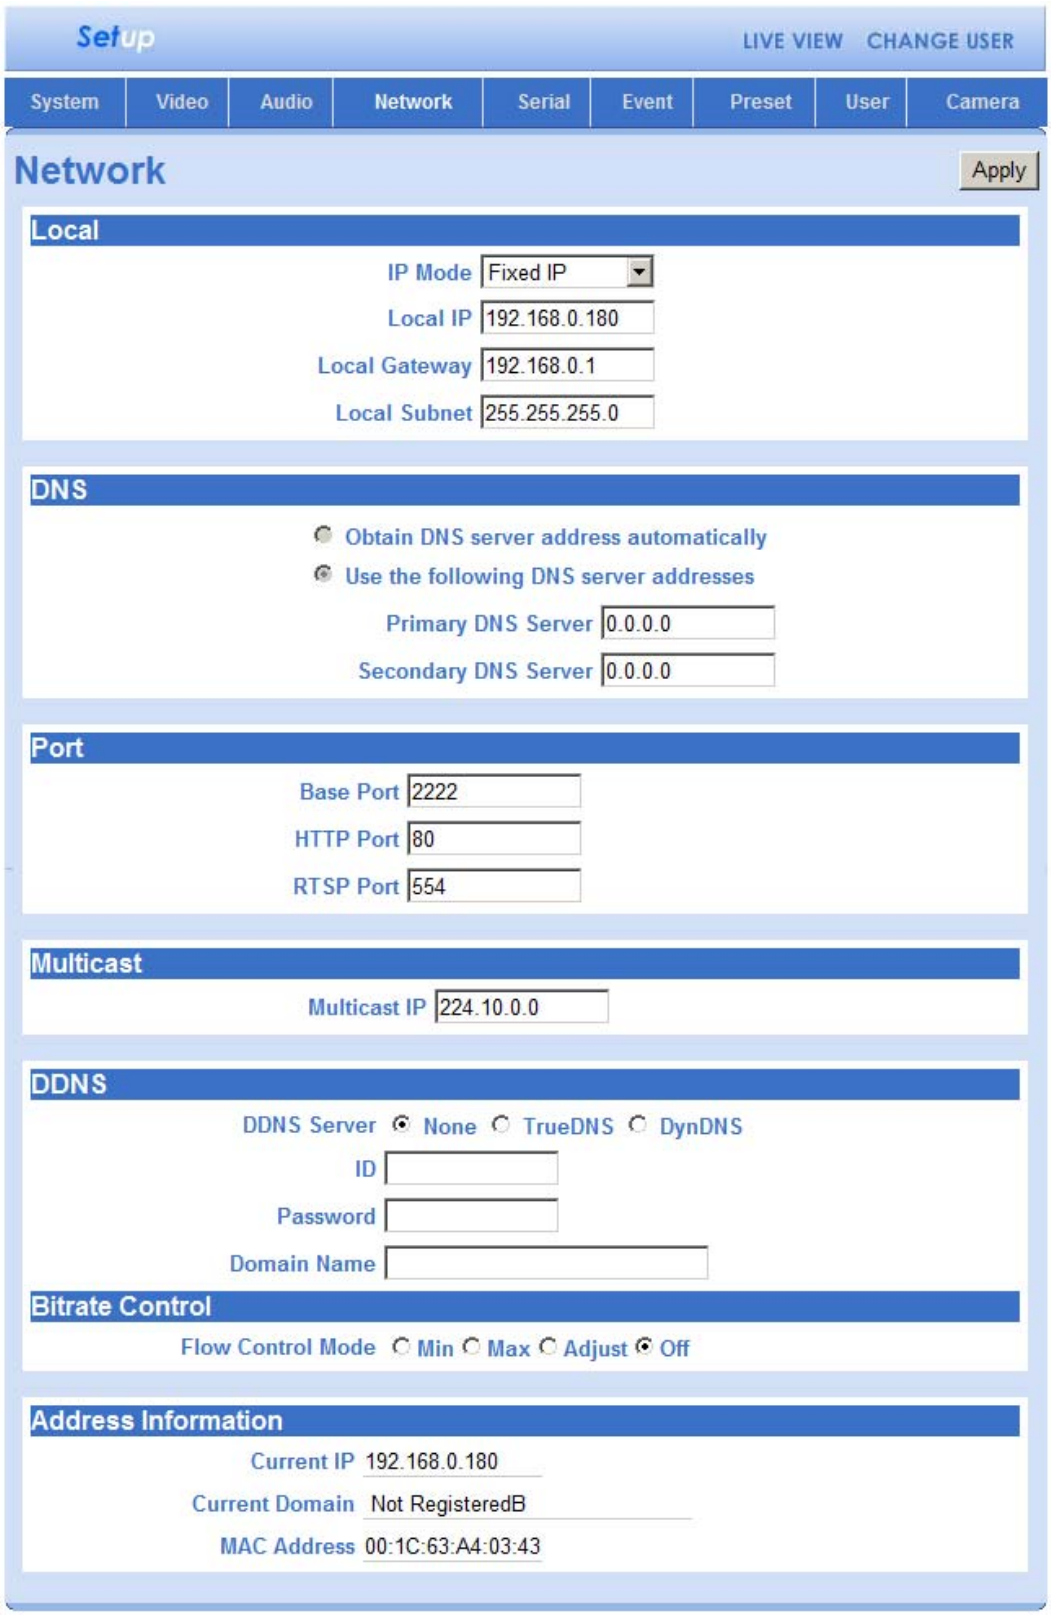

■ IP Mode

Three IP modes are supported. Depending on the selected mode, further configuration items come as follows.

IP Mode	Selection	Description
Fixed IP	Local IP	Fixed IP address
	Local Gateway	Gateway IP address
	Local Subnet	Subnet mask
DHCP	N/A	

☞ Please ask an IP address information from ISP provider or network manager.

■ DNS

Set DNS server IP address.

■ Base Port

Network base port to be used for communication among systems. In case for the IP cameras and remote systems to be connected together, the port number must be identically set.

■ HTTP Port

HTTP port use for web-based connection

■ RTSP port

Audio and video streaming from server to client conforms to RFC standards.

Streaming and direction	Protocol	Remarks
Server -> Client - Audio and video	- RTP(RFC1889) / RTSP(RFC2326) - RTP over RTSP(TCP)	Video: H.264 Audio: G.711 u-law
Client -> Server - Audio	- Non standard*	

Additional remarks

- Audio channel from client to server is not implemented yet, for standard way of delivering stream in such direction is not defined. The scheme can be discussed with client application developers and can be implemented easily if the scheme is determined.
- RTSP over HTTP tunneling will be supported soon.

■ Multicast IP

The multicast IP address selection range is between 224.0.1.0 and 238.255.255.255. The selection can be used only when media protocol is set to Multicast. The multicast address must be the same for the system to be connected using multicast protocol.

■ DDNS

Select the DDNS(Dynamic DNS) server to use. One of the two IP cameras can be selected.

- TrueDNS : use TrueDNS service. Systems can be registered on the website for TrueDNS service: http://ns1.truecam.net. System will get a domain name of xxx.truecam.net style. Refer user guide document for True DNS service.
- DynDNS : use DynDNS service. Refer www.dyndns.org for details.

■ Flow Control Mode

When several clients connect to an IP camera, bandwidths of networks clients may differ and some clients may not receive encoded stream fully. To handle such situation, three flow control modes which can be chosen according to users' preference are provided.

Mode	Description
Min	The bitrate is automatically adjusted to a client with smallest network bandwidth.
Max	The bitrate automatically adjusted to a client with largest network bandwidth size. When set to this mode, a client with smaller bandwidth will not receive all frames of video.
Adjust	The bitrate is adjusted to most optimum rate by learning the network bandwidth.
Off	Flow control is off.

■ Address Info

Display network related information.

IP Address

The IP camera own IP address. This information is useful when the IP camera's IP mode is set to DHCP.

Domain Name

In case the IP camera is registered with DDNS server, the registered domain name is displayed.

MAC Address

Display the MAC address of the IP camera. In case the IP camera is registered with DDNS server, the MAC address is used in DDNS registration.

3.2.5 Serial Port Configuration

In case for the user who use IP cameras or IP servers, there might be very seldom case to use this Serial port.

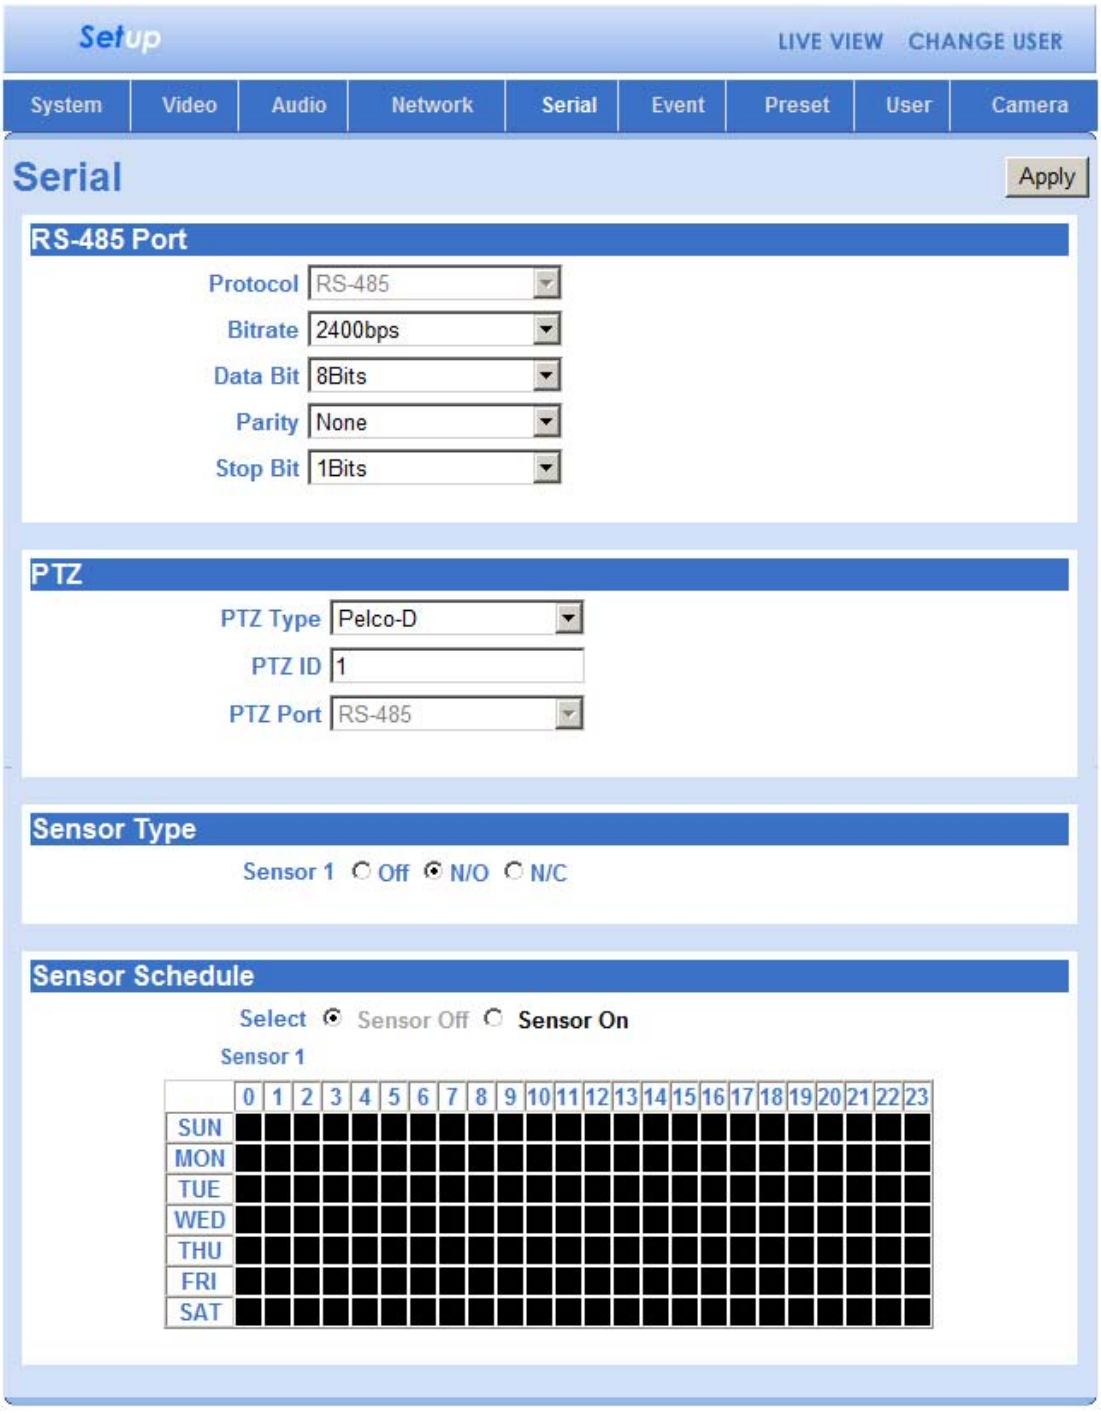

■ Serial Port Configuration

There is one serial port, RS-485.

The serial ports can be configured as follows.

Mode	Selection
Bitrate	2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
Data Bits	5, 6, 7, 8 bits
Parity	NONE, EVEN, ODD bit
Stop Bit	1, 2 bit

■ Sensor Type

There is one sensor input port on IP camera. The sensor port can be configured to the following.

Function	Operation
OFF	Not used
NO (Normally Open)	The port is normally open and activated when closed.
NC (Normally Closed)	The port is normally closed and activated when opened.

The function of the sensor port is set based on the type of the sensor connected.

■ PTZ Configuration

PTZ Type

Select the type of PTZ camera or receiver.

PTZ ID

Since it is possible to control multiple PTZ cameras or receivers over single control line, each camera or receiver will be assigned with unique ID. Enter PTZ ID of a camera or receiver for control. The ID value range can be between 0 and 255.

PTZ Port

Select the serial port used for PTZ camera control.

■ Schedule table of sensor devices

Sensor activity can be controlled using the schedule table. For each sensor port it is possible to turn on or off sensor activity for hourly unit of a week. The example below disables the sensor 1 during office hour (AM9:00 ~ PM6:00) from Monday to Friday.

3.2.6 Event Configuration

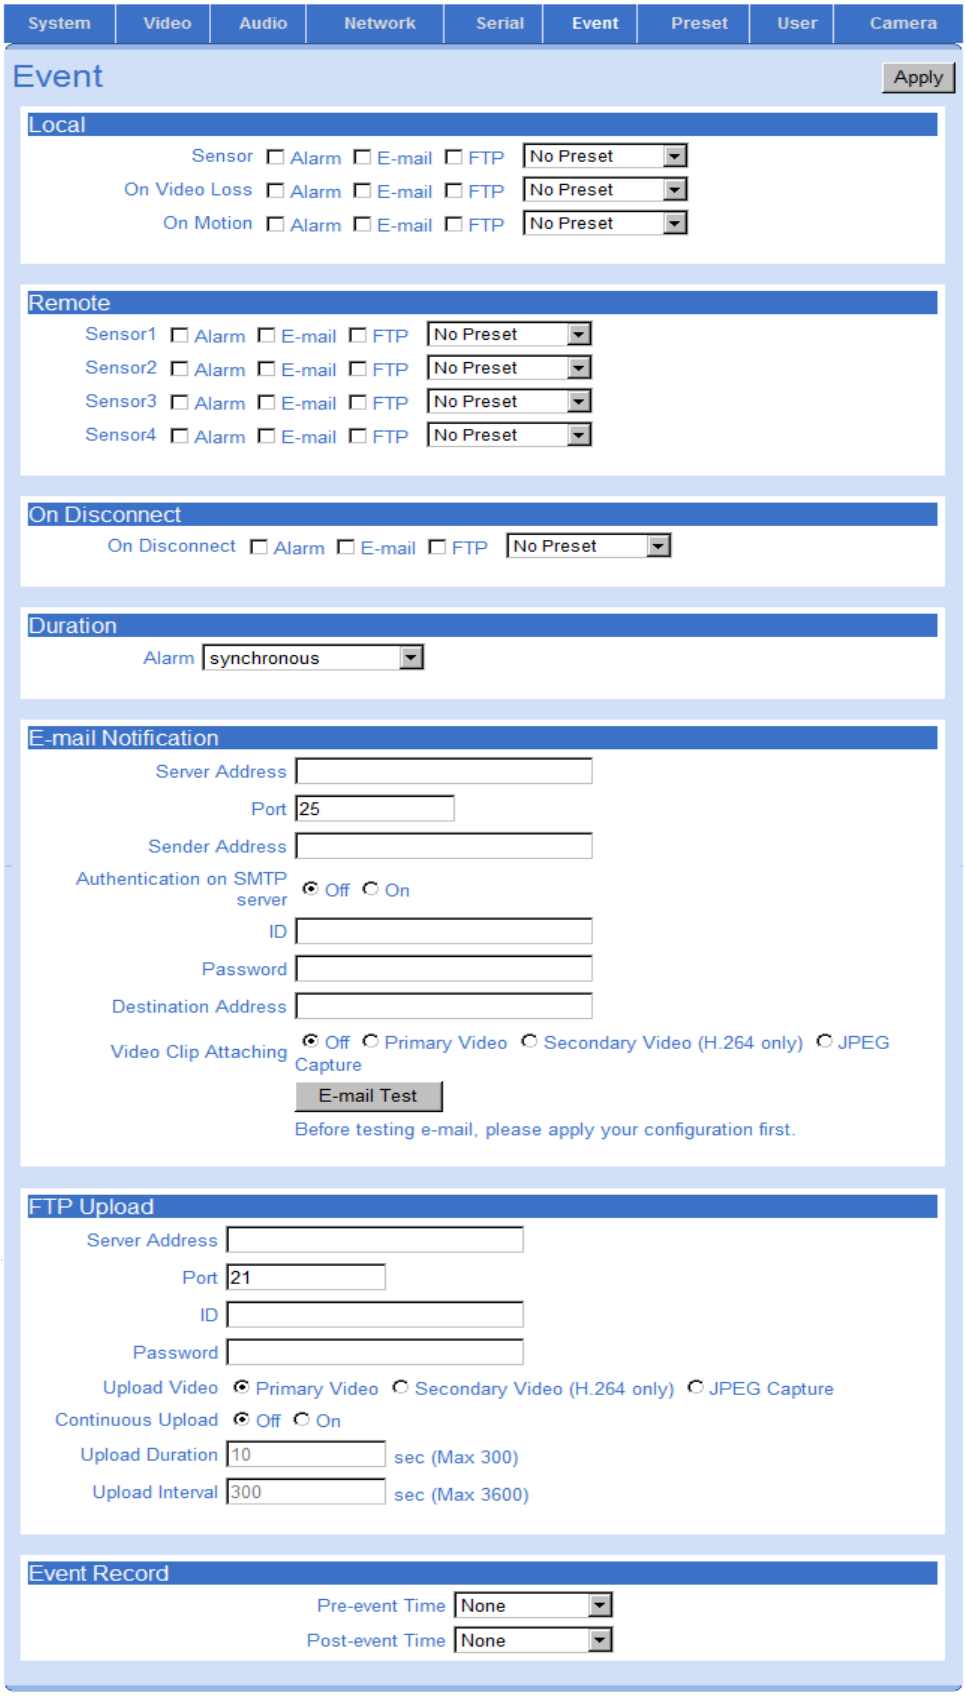

The Cywatch HD Megapixel IP camera has one sensor port and one relay port. Actual numbers of sensor, replay ports may vary depending on models.
When a decoder system instead of a PC client is connected to a Cywatch HD Megapixel IP camera, one system becomes a Local system and the other a Remote system (Generally a system which is being used by the user is called as Local system). Then, actions for events can be configured for events from remote system as well as for local system. For example, it is possible to turn on an alarm device in local(center) decoder system when a sensor device in remote(site) IP camera is triggered. Local section configures the actions for events from local(self) system, and configuration activates local devices and Remote sections configures the actions for events from remote(peer) system.

For each event, E-mail notification and/or FTP upload can be checked. If the event occurs, the server sends an E-mail and/or uploads a video clip to the specified FTP server.

The following table lists the possible actions for events.

Action	Description
Alarm	Triggers alarm(relay) port.
E-mail	Sends E-mail to the specified address. AVI file can be attached
FTP	Upload AVI file to a specified FTP server
Preset	On corresponding event, PTZ moves to the associated preset position. Once it moves to the position, it doesn't come back to original position automatically.

■ Sensor
Configure the actions when the sensor is activated. Multiple actions can be set for a single event.

■ On Video Loss
Configure the actions when video input signal is lost. Multiple actions can be set for a single event.

■ On Motion
Configure the actions when motion is detected. Multiple actions can be set for a single event.

■ On Disconnect
Configure the actions when the link(connection) with peer system is disconnected. Multiple actions can be set for a single event.

■ Alarm activation duration
Set the duration of alarm activation in case of an event. If it is set to continuous, it will be in active state until an operator reset it manually.

■ E-mail Notification

Specify the information to send E-mail as the action of an event. The address of mail(SMTP) server needs to be specified on **Server Address** field and **Port** specifies the port for SMTP operation (Port 25 is the default port in SMTP operation. If different port is configured in the SMTP server, this port needs to be changed accordingly). When the server requires authentication, **ID**, **password** and **Sender Address**(Sender E-mail Address) of an E-mail account need to be entered also. Destination address needs to be entered on **Destination Address** field. More than one address can be entered by delimiting comma(,) or semi-colon(;). Destination address can take up to 63 characters. Video clip of AVI file format at the moment of the event can be attached by setting Video Clip Attaching.

■ FTP Upload

Specify the information for uploading video file as the action of an event. The address of an FTP server to receive video files is specified on **Server Address** field, and **Port** specifies the port for FTP operation (Port 21 is the default port in FTP operation. If different port is configured in the FTP server, this port needs to be changed accordingly.). ID and password for accessing the FTP server also need to be specified.

By setting **Continuous Upload** to On, it is possible to upload video clip periodically regardless of events. **Upload Duration** specifies the duration of one upload file, and **Upload Interval** specifies how often it should happen. Upload Interval doesn't include the duration. If Upload Interval is 60 and Upload Duration is 20, it uploads a file for 20 seconds duration every 80 seconds.

■ Event Recording

Specify how a video clip is to be generated for E-mail sending or FTP uploading. **Pre-event Time** specifies the duration of recording before an event happens. **Post-event Time** specifies the duration after the event is cleared.

3.2.7 Preset Configuration

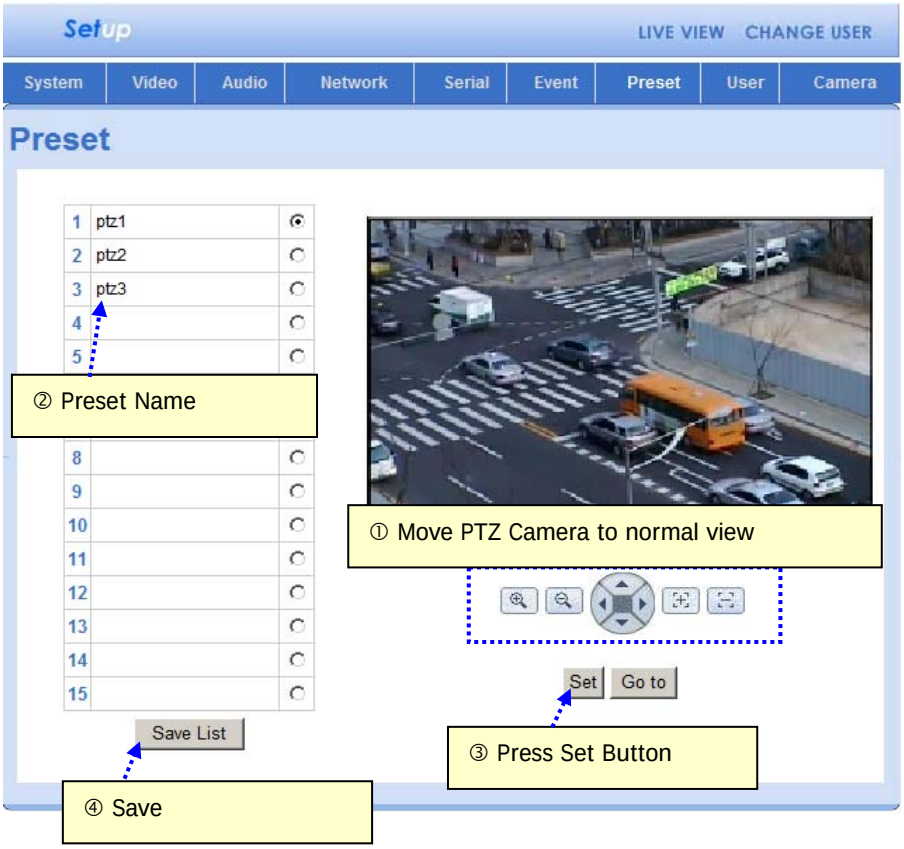

This function is available for using Cywatch HD Megapixel IP camera in order to control PTZ effectively through RS-485 port.

Configure up to 15 preset positions. Preset function is not available on some PTZ receivers. Make sure to check if a PTZ receiver supports preset.

■ Preset Configuration

Set the PTZ Presets by following the next steps.

① Move cameras to desired view using PTZ control buttons.

② Enter Preset name.

③ Press **Set** button.

④ Once all the presets are set, press **Save List** button.

■ Move to Preset Position

Select a preset from the Preset and press **Go To** button, then, the camera will move to the selected preset position.

3.2.8 User Configuration

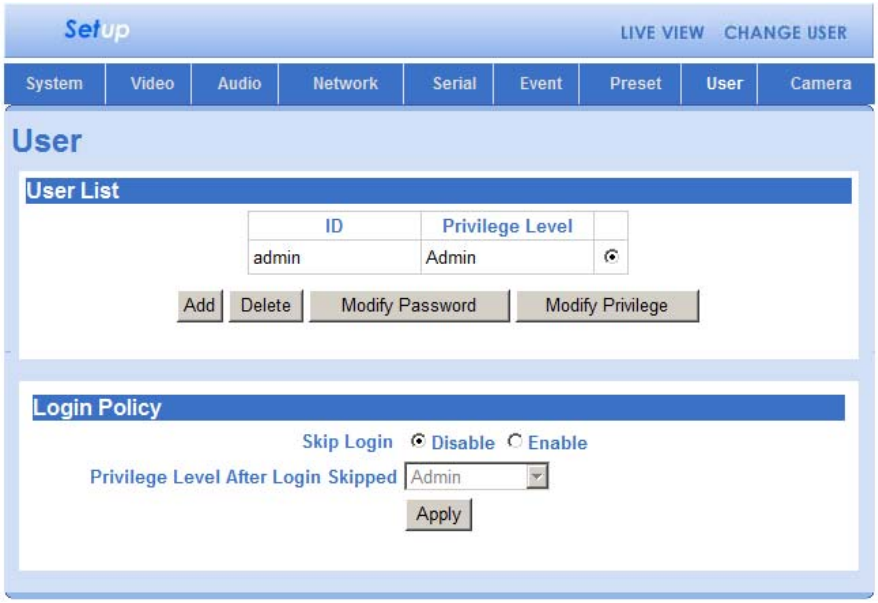

User can be registered and privilege level of a user can be specified. User configuration is allowed only to admin user. Max 16 users can be registered and each user can have one of four privileges.

Privilege	Allowed Operations	Remarks
Admin	All operations	User id = admin
Manager	All operations except for user configuration	
User	Live viewing and PTZ control	
Guest	Live viewing only	

■ Add User

Page for adding a user comes on pressing **Add** button.

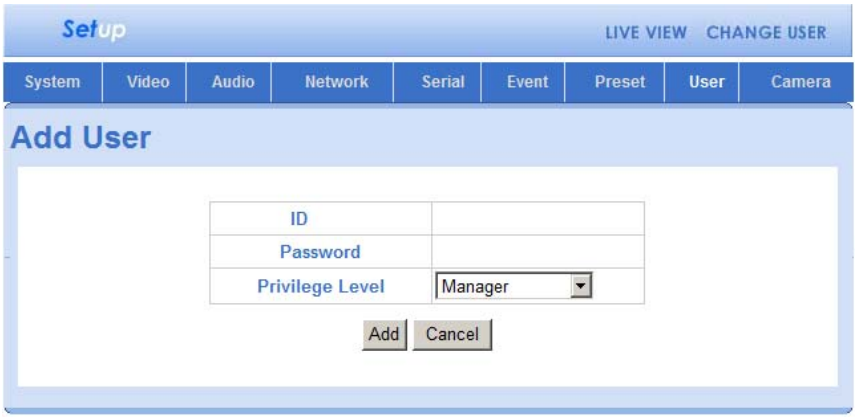

User ID and password need to be entered and privilege level need to be selected. User ID and password consist of alphanumeric string of max 15 characters.

■ Delete User

A user is deleted by pressing **Delete** button.

■ Change Password

Pressing **Modify Password** button after selecting a user shows a page for changing password.

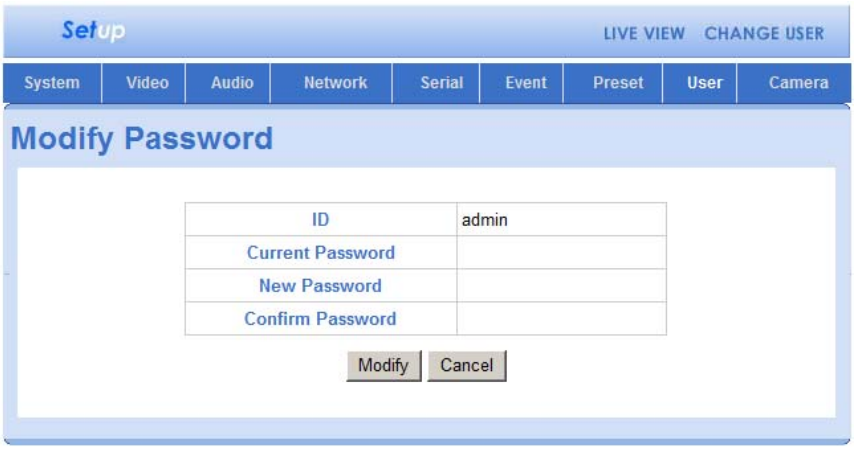

In case changing admin password, old password is checked.

■ Modify Privilege Level

Pressing **Modify Privilege** button after selecting a user shows a page for changing the privilege. It is not allowed to change the privilege level of admin user.

■ Login Policy

Skip Login is provided for convenient access to the server when authentication is not required. When **Skip Login** is set to Enable, login step is skipped. The privilege level after login in this way is determined by the setting of **Privilege Level After Login Skipped**.

3.2.9 Camera Configuration

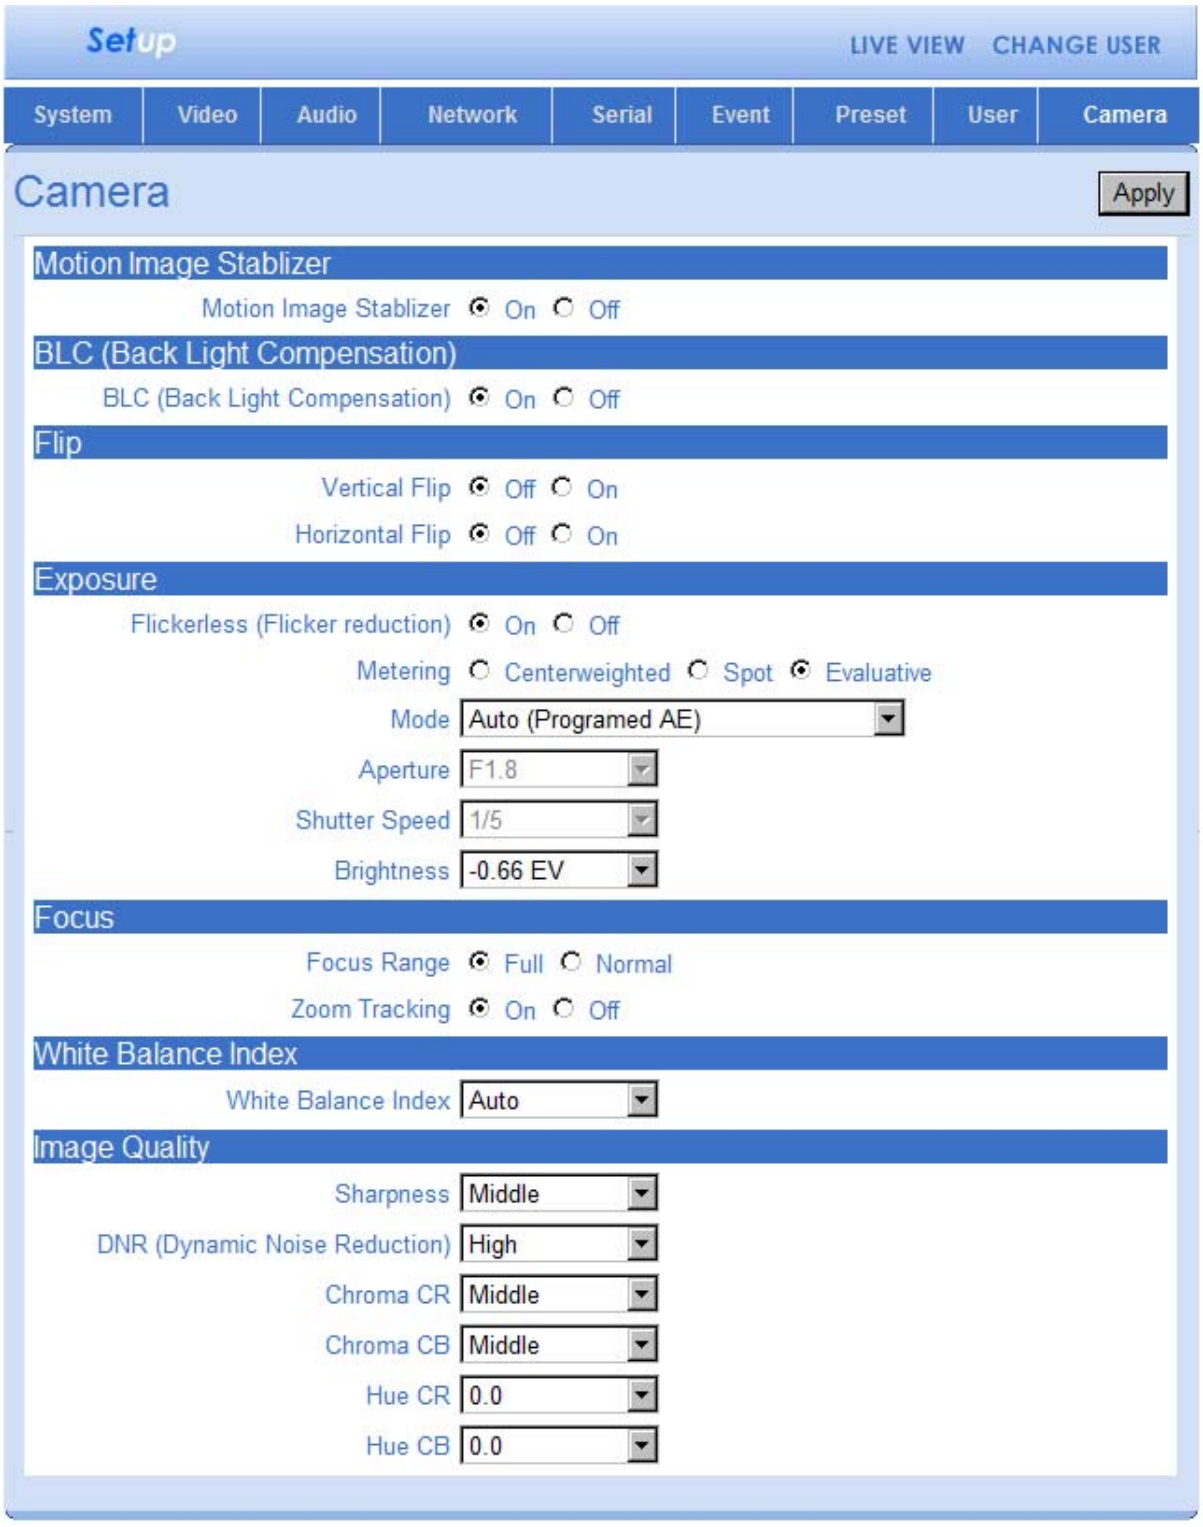

■ Motion image stabilizer

Real-time correction of blurs in capturing motion images is possible with this function.

Function	Operation
On	Motion image stabilizer active while in this setup
Off	Motion image stabilizer inactive while in this setup

■ BLC (Back Light Compensation)

Adjust exposure in back light scenes. The following setup is possible.

Function	Operation
On	Back light compensation is active while in this setup.
Off	Does not perform back light compensation.

■ Flip

Captured image is flipped vertically/horizontally.

- Vertical flip
  On/Off : Set vertical image flip
- Horizontal flip
  On/Off : Set horizontal image flip

■ Flickerless (Flicker reduction)

Reduce the influences from flickers of fluorescent lights with 50/60Hz.

Function	Operation
On	Automatically detects power frequency of fluorescent lights and reduces influences from flickers.
Off	Does not perform flicker reduction.

■ Metering

The metering methods to decide the amount of exposure.

Mode	Action
Centerweighted	Average metering on whole frame of images with weight at image center.
Spot	Metering on a narrow region of the center of captured images (approx. 1.6% of whole frame).
Evaluative	Metering on the whole frame of captured images in a well balanced way.

■ AE Mode

AE Modes described here are to control three elements (aperture, shutter speed, ISO speed) that decide exposure. The following setups are available.

Mode	Action
Auto	Camera automatically decides the three elements in line with the program diagram.
Aperture priority	Users set the aperture at first and then camera adjusts shutter speed

	and ISO speed.
Shutter priority	Users set the shutter speed at first and then camera adjusts aperture and ISO speed.
Manual	Users set aperture and shutter speed at will.

- Brightness

  Compensate exposure with EV unit. Can set maximum range of ±2EV with 1/3EV step.

- Focus Mode

Mode	Action
Auto	Automatically focuses on objects.
manual	Move from the current focus position to a given focus position. It is possible to move to the position that is out of focus range.

- Focus Lange

  Range specifies the range of searching the optimal focus position. The following setup is available.

Mode	Action
Full	Range between 1cm (wide end) and infinity
Normal	At wide end : Range between 20cm and infinity At tele end : Range between 100cm and infinity
Macro	Range between 1cm (wide end) and 1m

- White balance index

  Performs white balance control that fit to the light sources

Mode	Action
Auto	Suitable to wide range of light sources
Indoor	Incandescent indoor
Outdoor	Outdoor under the sunlight on sunny days
Manual	Specify x and y on xy chromaticity diagram.

- Sharpness

  Can set be High, Middle, Low for image sharpness

- DNR (dynamic noise reduction)

  DNR can be set High, Middle, Low, Off.

- Croma

  Chroma can be set independently for red tone (cr) and blue tone (Cb).

- Hue

  Hue can be set for red tone (Cr) and blue tone (Cb), each in 5 steps from -2 to +2.